



AVP-CBS2VW-100

1080P IP Video Processor/Windowing

This Quick Start Guide is for installation only. For complete user manual go to www.aegis4av.com

User Manual

Version: 201007V1.1







Important Safety Information

- 1. Read, follow, and keep these instructions.
- 2. Heed all warnings.
- Do not use this product near water. Keep away from wet places, such as: spas, pools, sinks, laundries, wet basements, etc.
- 4. When cleaning, unplug the unit and wipe with a dry cloth. Do not use damp cloths, cleaning fluids, or aerosols which may result in electric shock, fire, or unit damage.
- Operate this product using only the included power supply and/or power cable. Use of an unapproved power implement may impair performance, damage the product, or cause fires.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
- Only use attachments/accessories specified by Pixelfly to avoid fire, shock, or other hazards.
- To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
- 11. Unplug this product during lightning storms or when unused for long periods of time.
- Never open, remove unit panels, or make any adjustments not described in this manual. Attempting to do so could result in electric shock, damage to the unit, or other hazards.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



TO REDUCT THE RISK OF ELECTRIC SHOCK DO NOT OPEN ENCLOSURE OR EXPOSE TO RAIN OR MOISTURE. NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



Contents

Important Safety Information	1
Introduction	3
Features	3
Package Contents	3
Panel Description	4
Front Panel	4
Rear Panel	4
Specifications	6
Installation	7
Typical Application	8
Device Control	8
Windows Roaming Configuration	8
Hardware upgrade	14
Warranty	15



Introduction

AVP-CBS2VW-100 is a windowing processor, it can decode up to 6 IP streams with 1920x1080P@60Hz resolution supported and mix them in an overlapped way, and finally output to H.264 receivers through Ethernet or to an HDMI display through HDMI port. This device offers solutions for conference rooms, shopping malls, hotels, high resolution signage, monitoring centers, schools and corporate training environments, etc.

Features

- Decodes up to 6 video streams from multiple encoders and supports window roaming to H.264 decoders and a single display.
- Supports input streaming resolutions up to 1920x1080P@60Hz.
- 2-way RS-232 between the display and the controller system.
- Supports CEC one-touch-play and standby commands to power on/off the display.
- Supports auto IP/DHCP/Static IP.
- Supports Telnet/Multicast/HTTP/FTP.
- Ease to use with aegis IP Touch.
- Supports one HDMI output.
- Built-in Auto Scaler.
- Supports PoE.

Package Contents

- 1 x AVP-CBS2VW-100
- 1 x DC 12V Power Adapter (with US, UK, EU and AU Pins)
- 3 x Phoenix Male Connectors (3.5mm, 3 Pins)
- 2 x Mounting Brackets (with Screws)



Panel Description

Front Panel



No.	Name	Description
4	Dames I CD	• On: The device is powered on.
1	Power LED	• Off: The device is powered off.
		• Solid on: The device is connected to encoder and
2 Statu		the video is displayed.
	Status LED	• Blinking: The device is disconnected from encoder.
		Off: The device is powered off or in the boot
		process.
		Press to display the device's IP address & MAC address
3	ID Key	as well as the linked encoders' MAC address on the
		screen.

Rear Panel



No.	Name	Description			
1	DC 12V	Connect to the supplied 12V power adapter.			
2	LAN (POE)	Connect to an Ethernet Switch for device control and management. This device can be powered by a PoE-enabled power source equipment such as a PoE switch via this port. Note: We would recommend that you power this device by using a power adapter or a PoE-enabled switch instead of both of them at the same time.			
3	Audio Out	Connect to an audio receiver (e.g. amplifier, speaker) for de-embedded audio output.			
4	HDMI Out	Connect to an HDMI display.			



No.	Name	Description
5	RS232	 RS232-D: connect this port to a PC for debugging PF-IPHW. RS232-P: connect this port to a RS232 device such as a projector for bi-directional serial communication with a RS232 device on the IP control box side.
6	Reset Button	When AVP-CBS2VW-100 is powered on, use a pointed stylus to hold down the RESET button for five or more seconds, and then release it, it will reboot and restore to its factory defaults.



Specifications

Technical				
Input Video Ports	1 x LAN			
Input Video Type	H.264/MPEG-4 AVC			
Input Video Resolutions	Up to 1080p@60Hz			
Output Video Ports	1 x HDMI			
Output Video Type	HDMI			
Output Video	HDMI: Up to 1080P@60Hz			
Resolutions	IP Stream: Up to 1080P@60Hz			
Output Audio Ports	3-Pin Phoenix Female Connector			
Output Audio Format	Stereo, unbalanced			
Control Method	Windows PC configurator, PF-IP Touch on iPad and IP			
Resolutions Output Audio Ports Output Audio Format Control Method	IP Stream: Up to 1080P@60Hz 3-Pin Phoenix Female Connector Stereo, unbalanced Windows PC configurator, PF-IP Touch on iPad and IP control box			

General	
Operating Temperature	0°C to 45°C (32°F to 113°F)
Storage Temperature	-20°C to 70°C (-4°F to 158°F)
Humidity	10% to 90%, non-condensing
	Human-body Model:
ESD Protection	±8kV (Air-gap discharge)/
	±4kV (Contact discharge)
Power Supply	DC 12 V 1 A
Power Consumption	8.3 W
Device Dimension	220 mm x 25 mm x 420 2 mm/9 7" x 4" x 5 4"
(W x H x D)	220 mm x 25 mm x 130.2 mm/8.7° X 1° X 5.1°
Net Weight	0.78 kg/1.72lb



Installation

Note: Before installation, please ensure the device is disconnected from the power source.

Steps to install the device in a suitable location:

1. Remove the four screws from the two side panels.



2. Position and install the mounting brackets on the two side panels using the mounting screws provided in package.



3. Mount and secure the device to a surface or a suitable location with the mounting screws (provided by others).



Typical Application



Device Control

Through using HDMI over IP console, AGS-i Touch and IP control box, users can manage and control AVP-CBS2VW-100 functions. For more information, see relevant guidelines.

Windows Roaming Configuration

By using HDMI Over IP Console to operate the windows roaming of the AVP-CBS2VW-100. It provides up to 6 pictures to be overlapped and roamed on a single screen or a splicing screen TV wall.

Take following a 2x1 TV wall as an example to briefly instruct the steps of configuring window roaming.

 Double click HDMIoverIPConsole.exe on the computer (make sure that your computer, transcoder, AVP-CBS2VW-100 and CBS are all in the same network segment.)

Click "Search" for searching devices in the network segment.

	CONNECTION TOGETHER
Q, HDMI over IP Censole	- a ×
Project(P) Tools(T) Option(O) Help(H)	
With Company	Other Devices
Butch Group Change Z B B + - E Constructions	1 X
The claim type the forthease () Support of the constrainty () Constrainty (20. Alis τργ-δοτοπο 17 τ Ω Λ. 17. Αντ-0822-i= 16.
	د >
Information	đ x

🔨 aeais

2. Create New Group 01

Select "All Groups" > Click the button to Create Group > Entre name "01" > Click OK

# HDMI over IP Console Project(P) Tools(T) Option(O) Help(H)	
New Appa Ellow Abert Streeting EX Beith Grosp Chapp B + - 2 Part (Jian) 737 No. Rostnase	Al Group Come Group
Sap. ereg 1	C. Crede Group X Canice Table
nformation	

3. Create a Video Wall

Right Click on the group "01" and select Video Wall > Enter the Video Wall name as "VW1", row 2, col 1 on the pop-up box > Click OK



Video Wall Nam	e: 1x2TV	
Type:	MxN Video Wall	,
Row:	1	,
Col:	2	,
Group:	Aegis-Text	,

4. Create a Layout/Scene

Click on the button of "Layout/Scene" > Enter the name of Layout/Scene as "Windowing1" and select the type "PiP/Windowing Processor" > Click OK

Batch Group Change	1 V + . E	IX2TV ~	Create Layout/Some	654
ame(Alias) Type NO. All Groups	Nostname	Sort item in the list		Automatically apply
 ✓ 6 ungr Group 1 ℝ A PX 1 : ℝ A PX 2 : ✓ 6 Aegi Group 2 W 1 Vide 1 	AVP-DE2-100-3418228 AVP-DE2-100-3418228	RDCI	FOC:	
			Velo Valkov Opportunite Velo Valkov Name (uTV Some lopedSpar LevelSan Nam (portValkov) Rom Odnas: LepedSan Typ (RVMaloning Promor	Casel

5. Configure RX for layout Windowing 1

1) Drag the 2 RX devices from the RX list to the layout area as shown in the picture below.

2) Create Splicing screen :

Drag right button of the selected two RX > Right-click "Combine" > Enter the logical screen properties name "CBS2" - Check the Window roaming box - Select "AVP-CBS2VW-100" device in the drop-down menu > Click OK



C HDMI mar IR Console					
Project(P) Tools(T) Option(O) Help(H)					
New Copen ElSeve Search Save alies	Batch commands EDenco				
RX	1/277				
Batch Group Change 🕸 🔻 + .	CoepWind v	Create Larmat/Norma	LamatRana 💓 I		
Name (Alias) Type NO. Hostname	Lo Openwind	Carls Dependential P. Date	Coloradown (1		
V All Groups	Soft sike in the list				
R A. RX 1 AVE LEC 100 STIDECOM	-	TX:			
R A_ RX 2	RX:	ROC:			
W 1 Vide 1					
		~~~~			
			🗱 Logic Screen Properties		×
Batch commands EDemo			LayoutSome Name: OpenWindow		
h2TV		1	Lorial Scene Name	(RCI	
Conte Layout Sona / Edit Layout	Some 💥 Remove Layout/Some		🖂 window roaming	(constant)	
Sort itera in the list		1			
			Windowing Device:	AVP-CBS2VW-100	34182280F733 ~
TX:					
Chang	eTX •				
Chang	e Kok •				
Remo	e IX P				
Select	All				
Remo	e All TX				
Comb	ne				
Shire					
Logic	I Screen Properties				
Turn (	In IP/MAC Display				
Turn (	Itt IP/MAC Display				Off Oral
					UK CHIOL

 Save the configuration and upload to the control box AVP-CBS2K-101 Right-click "AVP-CBS2K-101" in Other Devices list > Click "Upload" > Click "OK" in the pop-up warning box



6. Configuration of AGS-i TOUCH on iPad

Connect iPad to wireless LAN and make sure it is in the same network segment as the control box AVP-CBS2K-101.



- 7. To operate AGS-i TOUCH software on your iPad:
  - Click "Advanced Settings" on the settings page > Enter the password "admin" > Click "Change IP Controller's IP Address" and enter AVP-CBS2K-101's IP address > Click "Connect to Controller"





 Enter Windowing1 layout page. Select any video source from the bottom of the input source list and drag it to any position in the upper screen area. It supports up to 6 video pictures for any size window roaming.









## Hardware upgrade

Users can use MaintainTool software to upgrade the hardware of AVP-CBS2VW-100. Please refer to the MaintainTool User Guide for details.



## Warranty

This warranty shall not apply if any of the following:

- A. The product has been damaged by negligence, accident, lightning, water, or mishandling.
- B. The product has not been operated in accordance with procedures specified in operating instructions.,
- C. The product has been repaired and or altered by other than the manufacturer or authorized service center.
- D. The product's original serial number has been modified or removed.
- E. External equipment other than supplied by the manufacturer, in the determination of a manufacturer, shall have affected the performance, safety or reliability of the product.
- F. Part(s) are no longer available for the product.

If the product needs repair or replacement during the specified warranty period, the product should be shipped back to Manufacturer at Purchaser's expense. Repaired or replaced product shall be returned to Purchaser by standard shipping methods at Manufacturer's discretion. Express shipping will be at the expense of the Purchaser.

No other warranty, express or implied other than Manufacturers shall apply.

The manufacturer does not assume any responsibility for consequential damages, expenses or loss of revenue or property, inconvenience or interruption in operation experienced by the customer due to a malfunction of the purchased equipment. No warranty service performed on any product shall extend the applicable warranty period. This warranty does not cover damage to the equipment during shipping and Manufacturer assumes no responsibility for such damage. This product warranty extends to the original purchaser only and will be null and avoid upon any assignment or transfer.

## NOTE







