



Network Switch Quick Setup Guide

Edge Core - ECS2100 Series

NETGEAR - M4300 Series

QCTek Switch - NPG-16M Series

Zyxel - GS1900 Series

Quick Setup Guide

Version: 20240919

Table of Contents

Edge Core - ECS2100 Series

Modify computer IP address	2
Windows IP Setup	2
MAC IP Setup	4
Switch Requirement	5
Feature explanation	5
Connecting to the switch Web GUI Interface	6
Configuration Jumbo Frame	6
Configure IGMP Snooping	7
Configure Vlan IGMP	8

NETGEAR - M4300 Series

Modify computer IP address	10
Windows IP Setup	10
MAC IP Setup	12
Switch Requirement	13
Feature explanation	13
Connecting to the switch Web GUI Interface	14
Configuration Frame Size	14
Configure IGMP Snooping	15
To change Interface Configuration	16
To Enable IGMP Snooping VLAN Configuration	17
To Enable Querier Configuration	18
To Save Configuration	19

QCTek Switch - NPG-16M Series

Modify computer IP address	21
----------------------------------	----

Windows IP Setup	21
MAC IP Setup.....	23
Switch Requirement	24
Feature explanation	24
Connecting to the switch Web GUI Interface	25
Configuration Frame Size	25
Configure IGMP Snooping	26
To Configuration VLAN.....	27
To save Running Configuration	27

Zyxel - GS1900 Series

Modify computer IP address	29
Windows IP Setup	29
MAC IP Setup.....	31
Switch Requirement	32
Feature explanation	32
Connecting to the switch Web GUI Interface	33
Configure IGMP Snooping	34

Edge Core Network Switch ECS2100 Series


Quick Setup Guide

Version: 20240919


Modify computer IP address

Windows IP Setup


1. Connect the PC to network setting (Windows 11)
2. Go to Network & Internet and select Ethernet or Wi-Fi

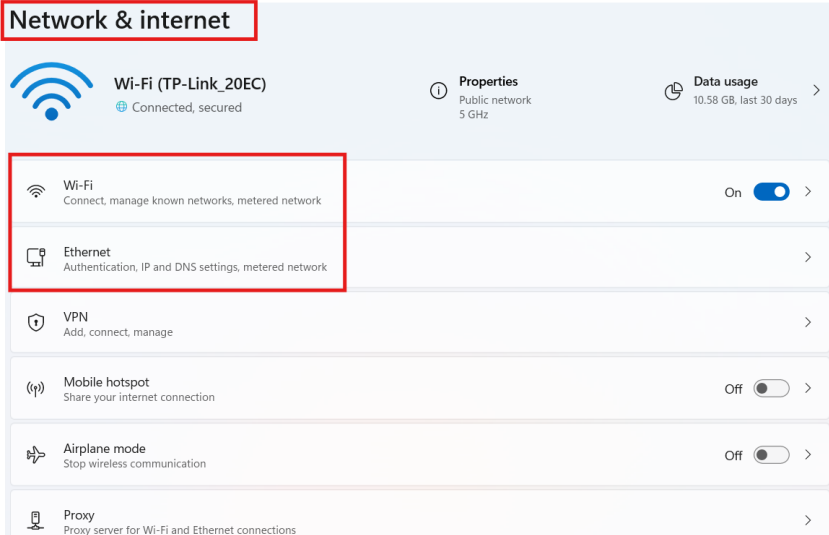

3. Go to Ethernet and Edit

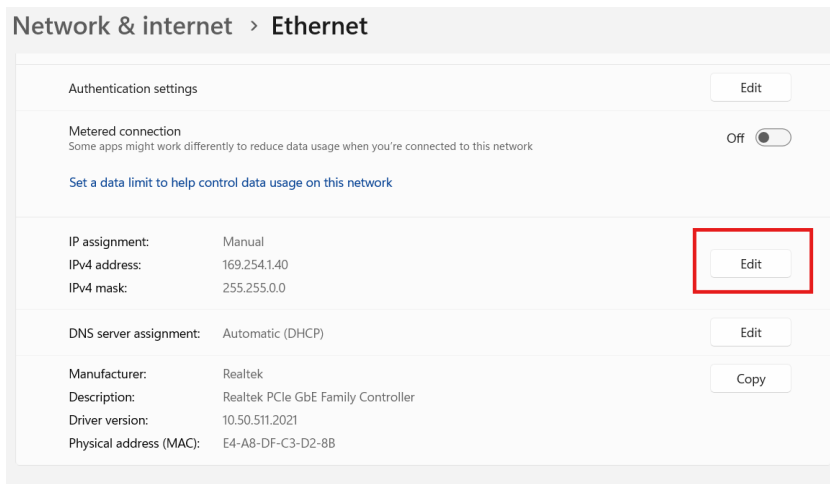


4. Select IP setting From DHCP to Manual and setup IP Address to make sure with the same subnet as switch

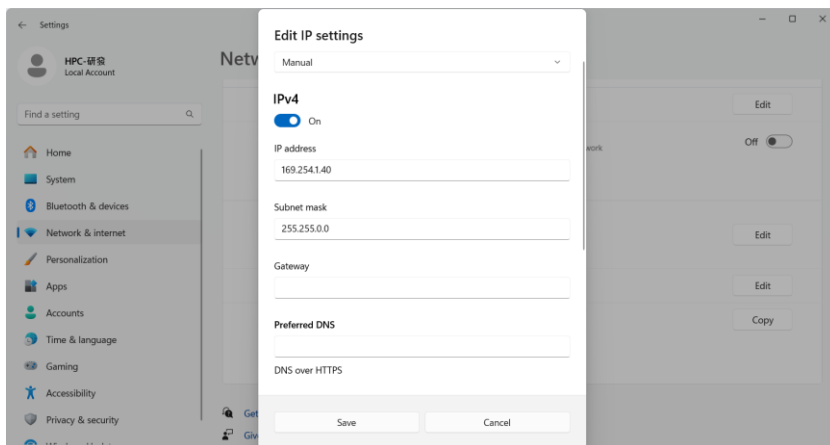


MAC IP Setup

1. Connect the Mac to network switch via Ethernet or Wifi
2. Go to Wifi / Ethernet interface and select detail

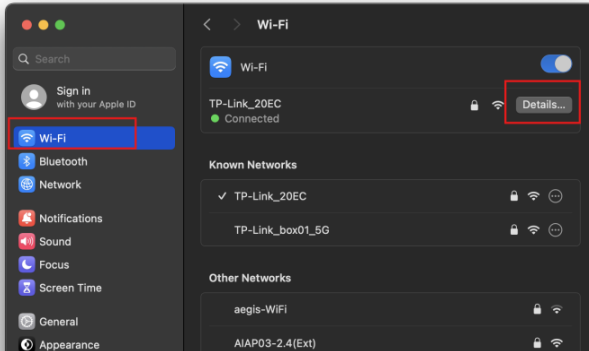

3. Go to TCP/IP and Select Configure IPV4 from DHCP to Manually. Setup IP Address to make sure with the same subnet as switch

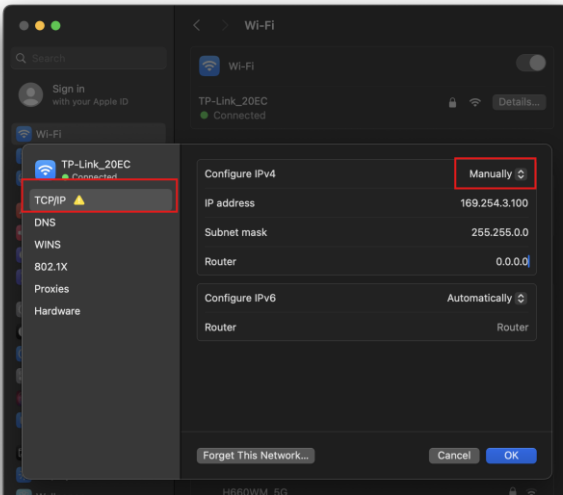

Switch Requirement

The following features need to be enabled on the network switch being used for a Switch

1. Multicast
2. Jumbo Frames / Frame Size / MTU over 9000
3. IGMP Management / Snooping
4. PoE (where being utilised)

Feature explanation

- **Multicast** : (one-to-many or many-to-many distribution) is a group communication where information is addressed to a group of network devices simultaneously
- **Jumbo Frames / Frame Size / MTU** : are Ethernet frames with more than 1,500 bytes of payload. Conventionally, jumbo frames can carry up to 9,216 bytes of payload and must be activated in order to send large packets of data for HDMI distribution
- **IGMP Management / Snooping** : Internet Group Management Protocol (IGMP) snooping is a feature that allows switches to intelligently forward multicast traffic to avoid broadcasting the traffic to all ports to improve network performance..
- **POE** : (Power over Ethernet) devices are all capable of being powered by PoE. Power Supply Units are available for devices, however, the products are not sold with these included. PoE can be disabled on the switch if external PSU' s are being used

Connecting to the switch Web GUI Interface

1. Open your internet browser (Google Chrome, Mozilla, Internet Explorer etc)
2. Type the network switch default IP address into the web browser bar
3. Enter the default user name and password

Default IP address: *192.168.2.10*

User: admin

Password: admin


Configuration Jumbo Frame

To Enable Jumbo Frame

Under "System"

Under "Capability"

Enable Jumbo Frame and Apply

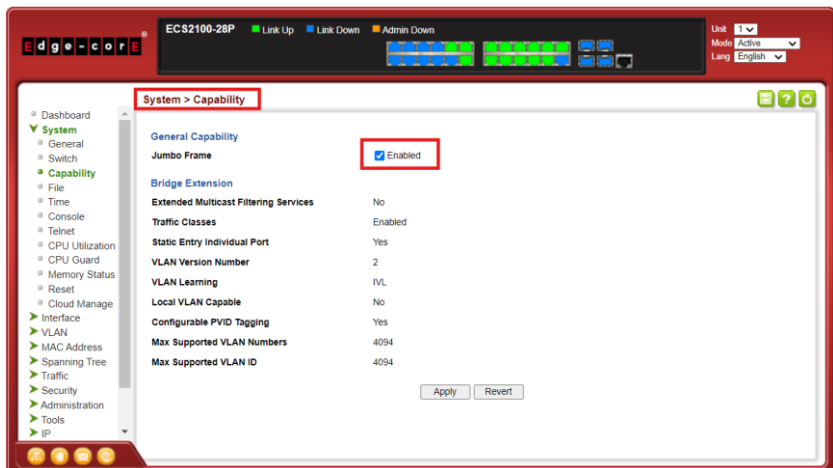

Configure IGMP Snooping

You can configure the parameters for IGMP snooping, which is used to build forwarding lists for multicast traffic.

Note:

You must log in as the admin user, which has read/write access privileges to change the data on this page.


To configuration IGMP Snooping

Under Multicast

Under IGMP Snooping

Under General

Enable below feature and Apply

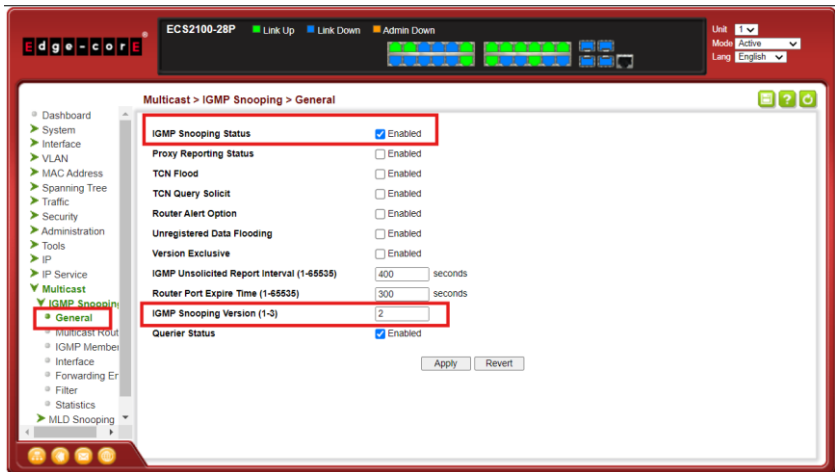

Configure Vlan IGMP


To Configuration Vlan IGMP

Under Multicast

Under IGMP Snooping

Under Interface

Enable below feature and Apply

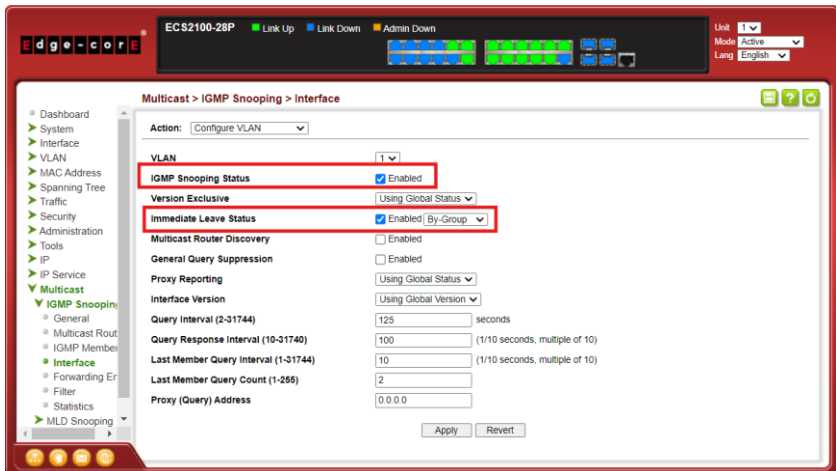

NETGEAR

10G Network Switch

M4300 Series


Quick Setup Guide

Version: 20240919


Modify computer IP address

Windows IP Setup


1. Connect the PC to network setting (Windows 11)
2. Go to Network & Internet and select Ethernet or Wi-Fi

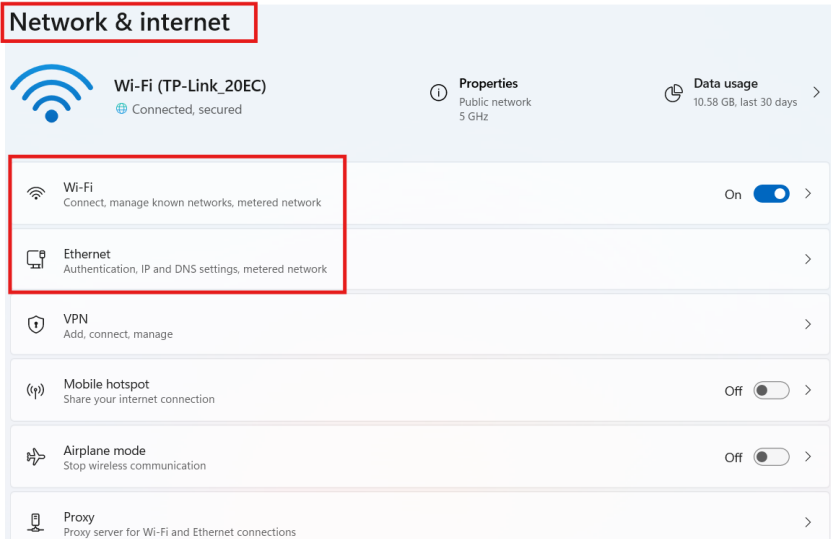

3. Go to Ethernet and Edit

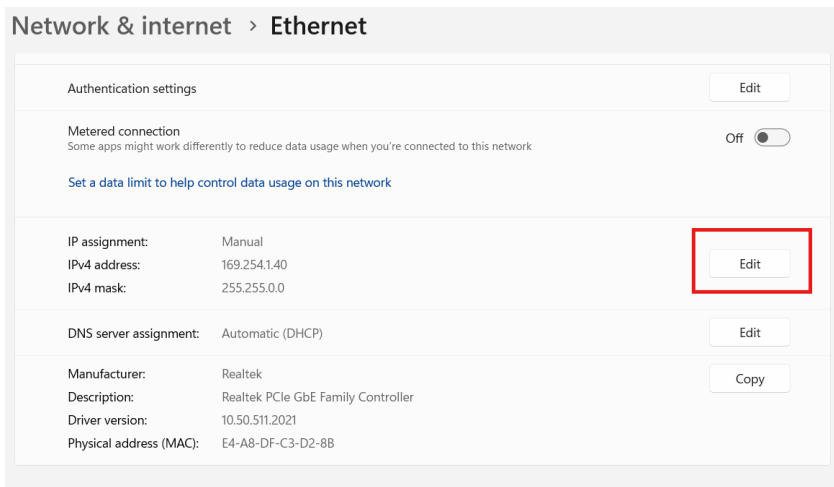


4. Select IP setting From DHCP to Manual and setup IP Address to make sure with the same subnet as switch

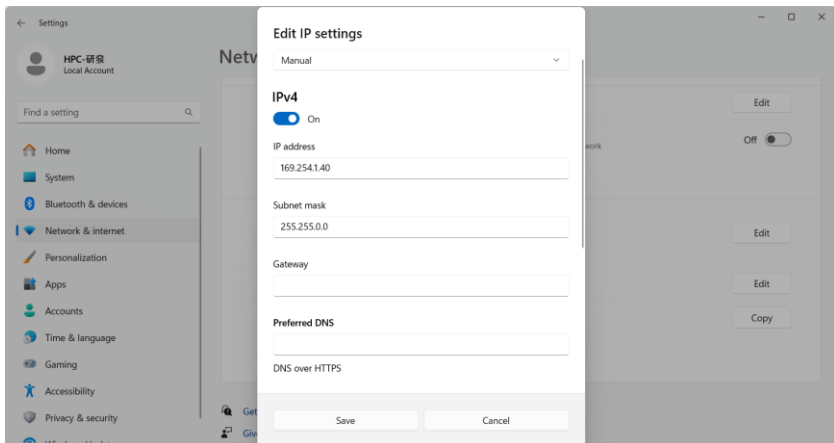


MAC IP Setup

1. Connect the Mac to network switch via Ethernet or Wifi
2. Go to Wifi / Ethernet interface and select detail

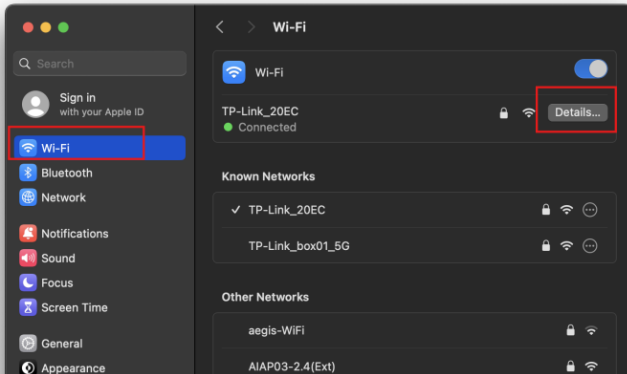

3. Go to TCP/IP and Select Configure IPV4 from DHCP to Manually. Setup IP Address to make sure with the same subnet as switch

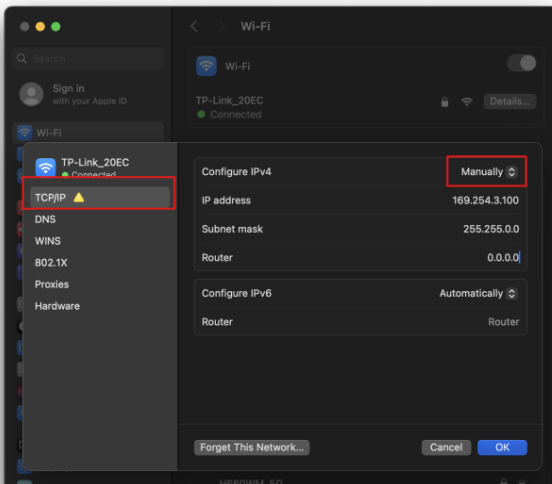

Switch Requirement

The following features need to be enabled on the network switch being used for a Switch

1. Multicast
2. Jumbo Frames / Frame Size / MTU over 9000
3. IGMP Management / Snooping
4. PoE (where being utilised)

Feature explanation

- **Multicast** : (one-to-many or many-to-many distribution) is a group communication where information is addressed to a group of network devices simultaneously
- **Jumbo Frames / Frame Size / MTU** : are Ethernet frames with more than 1,500 bytes of payload. Conventionally, jumbo frames can carry up to 9,216 bytes of payload and must be activated in order to send large packets of data for HDMI distribution
- **IGMP Management / Snooping** : Internet Group Management Protocol (IGMP) snooping is a feature that allows switches to intelligently forward multicast traffic to avoid broadcasting the traffic to all ports to improve network performance.
- **POE** : (Power over Ethernet) devices are all capable of being powered by PoE. Power Supply Units are available for devices, however, the products are not sold with these included. PoE can be disabled on the switch if external PSU' s are being used

Connecting to the switch Web GUI Interface

1. Open your internet browser (Google Chrome, Mozilla, Internet Explorer etc)
2. Type the network switch default IP address into the web browser bar
3. Enter the default user name and password

Default IP address: **169.254.100.100**

User: admin

Password:

Configuration Frame Size


To change the Frame Size

Under "Switching"

Under "Ports"

Under "Port Configuration"

Change Frame Size over 9000 and Click Apply

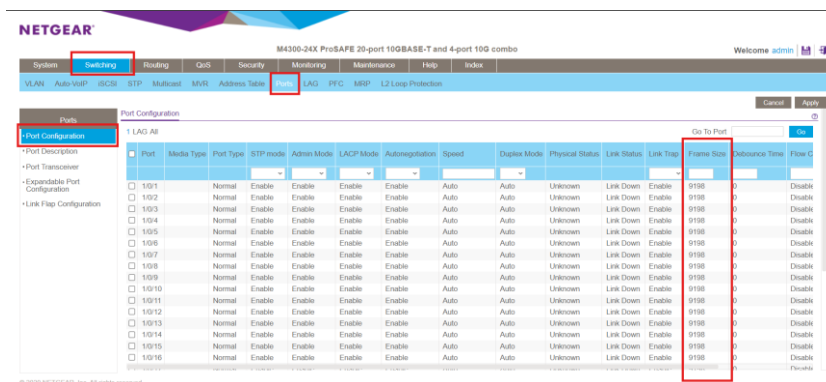

The screenshot shows the Netgear switch Web GUI interface. The navigation menu includes System, Switching, Routing, QoS, Security, Monitoring, Maintenance, Help, and Index. The 'Switching' menu is expanded, showing options like VLAN, Auto-VLAN, SCS, STP, Multicast, MVR, Address Table, Ports, LAG, PFC, MRP, and L2 Loop Protection. The 'Ports' menu is selected, leading to the 'Port Configuration' page. The 'Port Configuration' table is displayed, showing a list of ports (10/1 to 10/16) with columns for Port, Media Type, Port Type, STP mode, Admin Mode, LACP Mode, Autonegotiation, Speed, Duplex Mode, Physical Status, Link Status, Link Trap, Frame Size, Distance Time, and Flow Control. The 'Frame Size' column is highlighted with a red box, and the 'Go To Port' button is also highlighted.

Port	Media Type	Port Type	STP mode	Admin Mode	LACP Mode	Autonegotiation	Speed	Duplex Mode	Physical Status	Link Status	Link Trap	Frame Size	Distance Time	Flow C
<input type="checkbox"/> 10/1	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/2	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/3	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/4	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/5	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/6	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/7	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/8	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/9	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/10	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/11	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/12	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/13	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/14	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/15	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable
<input type="checkbox"/> 10/16	Normal	Enable	Enable	Enable	Enable	Enable	Auto	Auto	Unknown	Link Down	Enable	9198	0	Disable

Configure IGMP Snooping

You can configure the parameters for IGMP snooping, which is used to build forwarding lists for multicast traffic.

Note:

You must log in as the admin user, which has read/write access privileges to change the data on this page.

To Enable IGMP Snooping


Under "Switching"

Under "Multicast"

Under "IGMP Snooping"

Under "Configuration"

Enable below feature for IGMP Snooping

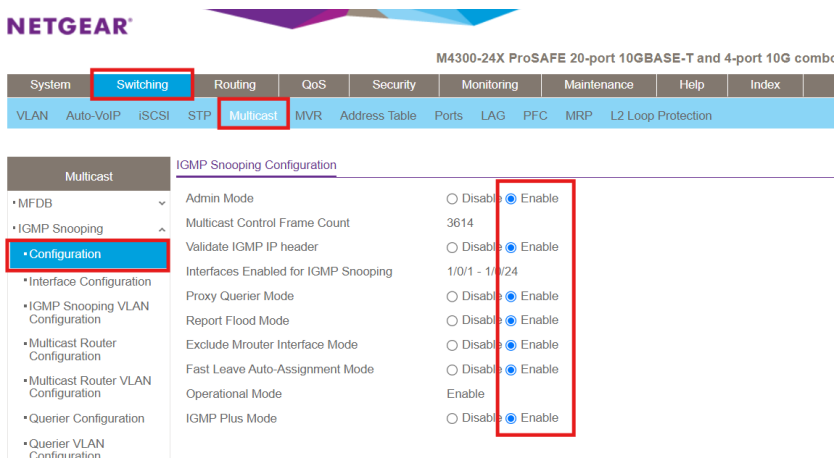

NETGEAR

M4300-24X ProSAFE 20-port 10GBASE-T and 4-port 10G comb

System	Switching	Routing	QoS	Security	Monitoring	Maintenance	Help	Index			
VLAN	Auto-VoIP	iSCSI	STP	Multicast	MVR	Address Table	Ports	LAG	PFC	MRP	L2 Loop Protection

Multicast		IGMP Snooping Configuration	
• MFDB	Admin Mode	<input type="radio"/> Disable	<input checked="" type="radio"/> Enable
• IGMP Snooping	Multicast Control Frame Count	3614	<input checked="" type="radio"/> Enable
• Configuration	Validate IGMP IP header	<input type="radio"/> Disable	<input checked="" type="radio"/> Enable
• Interface Configuration	Interfaces Enabled for IGMP Snooping	1/0/1 - 1/0/24	<input checked="" type="radio"/> Enable
• IGMP Snooping VLAN Configuration	Proxy Querier Mode	<input type="radio"/> Disable	<input checked="" type="radio"/> Enable
• Multicast Router Configuration	Report Flood Mode	<input type="radio"/> Disable	<input checked="" type="radio"/> Enable
• Multicast Router VLAN Configuration	Exclude Mirrouter Interface Mode	<input type="radio"/> Disable	<input checked="" type="radio"/> Enable
• Querier Configuration	Fast Leave Auto-Assignment Mode	<input type="radio"/> Disable	<input checked="" type="radio"/> Enable
• Querier VLAN Configuration	Operational Mode	Enable	<input checked="" type="radio"/> Enable
	IGMP Plus Mode	<input type="radio"/> Disable	<input checked="" type="radio"/> Enable

To change Interface Configuration

Under "Switching"

Under "Multicast"

Under "IGMP Snooping"

Under "Interface Configure"

Enable below Settings and Apply

NETGEAR

M4300-24X ProSAFE 20-port 10GBASE-T and 4-port 10G combo

System	Switching	Routing	QoS	Security	Monitoring	Maintenance	Help	Index			
VLAN	Auto-VoIP	iSCSI	STP	Multicast	MVR	Address Table	Ports	LAG	PFC	MRP	L2 Loop Protection

Multicast

IGMP Snooping Interface Configuration

1 LAG All

Interface	Admin Mode	Membership Interval	Max Response Time	Expiration Time	Fast Leave	Proxy Querier	Fast Leave Operational Mode
<input type="checkbox"/> 1/0/1	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/2	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/3	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/4	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/5	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/6	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/7	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/8	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/9	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/10	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/11	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/12	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/13	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/14	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/15	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/16	Enable	600	120	300	Enable	Enable	Disable
<input type="checkbox"/> 1/0/17	Enable	600	120	300	Enable	Enable	Disable
...

© 2020 NETGEAR, Inc. All rights reserved.

To Enable IGMP Snooping VLAN Configuration

Under "Switching"

Under "Multicast"

Under "IGMP Snooping"

Under "IGMP Snooping VLAN Configuration"

Enable below Settings and Apply



The screenshot shows the Netgear web interface for an M4300-24X ProSAFE switch. The navigation menu includes System, Switching, Routing, QoS, Security, Monitoring, Maintenance, Help, and Index. The 'Switching' menu is expanded to show VLAN, Auto-VLAN, ISCSI, STP, Multicast, MVR, Address Table, Ports, LAG, PFC, MRP, and L2 Loop Protection. The 'Multicast' menu is further expanded to show IGMP Snooping VLAN Configuration, Multicast Router Configuration, Multicast Router VLAN Configuration, Querier Configuration, Querier VLAN Configuration, IGMP Snooping Group Table, and MLD Snooping. The 'IGMP Snooping VLAN Configuration' page is displayed, showing a table with the following columns: VLAN ID, Action Mode, Fast Leave, Membership Interval, Maximum Response Time, Multicast Router Expiry Time, Report Suppression, Priority Querier, Report Flood Mode, Exclude Router Interface Mode, and IGMP Plus. The table contains one row for VLAN 1, with 'Enable' selected for Action Mode and Fast Leave, and '800' for Membership Interval. The 'Apply' button is visible at the bottom right of the configuration area.

VLAN ID	Action Mode	Fast Leave	Membership Interval	Maximum Response Time	Multicast Router Expiry Time	Report Suppression	Priority Querier	Report Flood Mode	Exclude Router Interface Mode	IGMP Plus
1	Enable	Enable	800	120	300	Disable	Enable	Enable	Enable	Enable

© 2020 NETGEAR, Inc. All rights reserved.

To Enable Querier Configuration


Under "Switching"

Under "Multicast"

Under "IGMP Snooping"

Under "Querier Configuration"

Enable below Settings and Apply

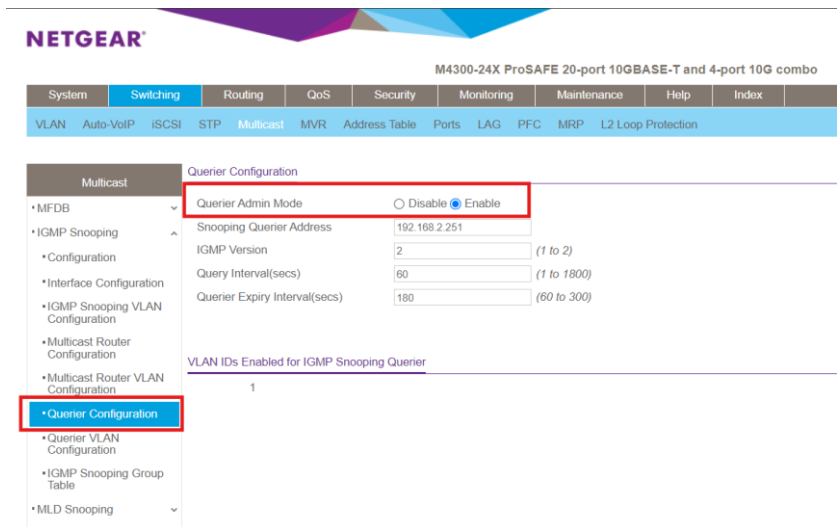

NETGEAR M4300-24X ProSAFE 20-port 10GBASE-T and 4-port 10G combo

System	Switching	Routing	QoS	Security	Monitoring	Maintenance	Help	Index			
VLAN	Auto-VoIP	iSCSI	STP	Multicast	MVR	Address Table	Ports	LAG	PFC	MRP	L2 Loop Protection

Multicast Querier Configuration

- MFDB
- IGMP Snooping
 - Configuration
 - Interface Configuration
 - IGMP Snooping VLAN Configuration
 - Multicast Router Configuration
 - Multicast Router VLAN Configuration
 - Querier Configuration
 - Querier VLAN Configuration
 - IGMP Snooping Group Table
 - MLD Snooping

Querier Admin Mode Disable Enable

Snooping Querier Address: 192.168.2.251

IGMP Version: 2 (1 to 2)

Query Interval(secs): 60 (1 to 1800)

Querier Expiry Interval(secs): 180 (60 to 300)


VLAN IDs Enabled for IGMP Snooping Querier: 1

To Save Configuration

Under "Maintenance"

Under "Save Configuration"

Click the checkbox and Apply

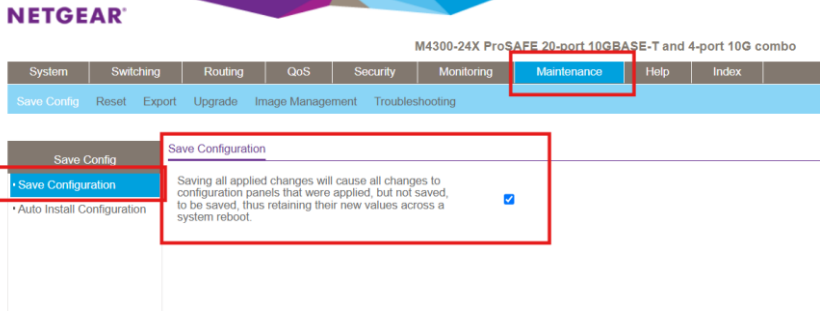

The screenshot shows the Netgear web interface for an M4300-24X ProSAFE switch. The 'Maintenance' tab is selected in the top navigation bar. In the 'Save Configuration' section, the 'Save Configuration' option is selected, and a checkbox is checked. The text next to the checkbox reads: 'Saving all applied changes will cause all changes to configuration panels that were applied, but not saved, to be saved, thus retaining their new values across a system reboot.'

NETGEAR

M4300-24X ProSAFE 20-port 10GBASE-T and 4-port 10G combo

System Switching Routing QoS Security Monitoring **Maintenance** Help Index

Save Config Reset Export Upgrade Image Management Troubleshooting

Save Config

Save Configuration

• Save Configuration Saving all applied changes will cause all changes to configuration panels that were applied, but not saved, to be saved, thus retaining their new values across a system reboot.

• Auto Install Configuration

QCTek Switch

NPG-16M Series


Quick Setup Guide

Version: 20240919


Modify computer IP address

Windows IP Setup


1. Connect the PC to network setting (Windows 11)
2. Go to Network & Internet and select Ethernet or Wi-Fi

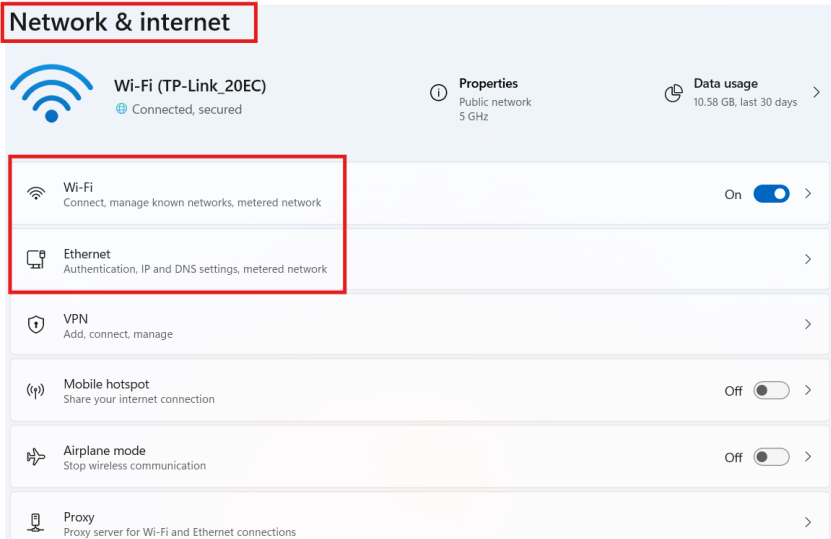

3. Go to Ethernet and Edit

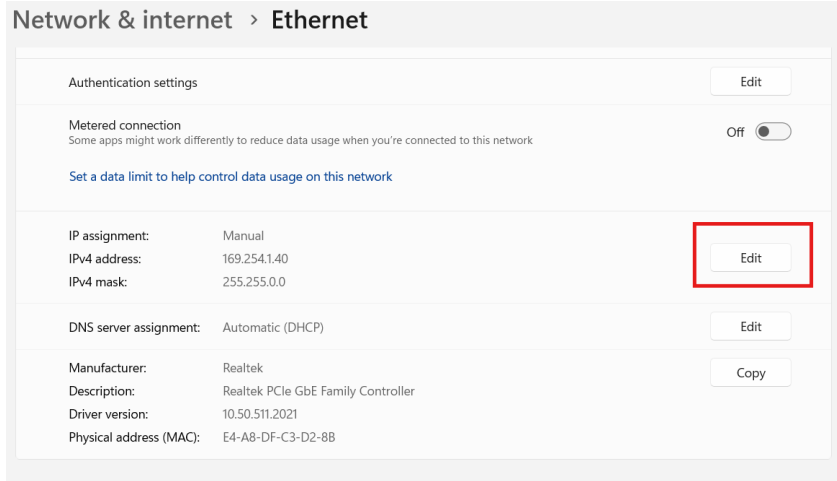


4. Select IP setting From DHCP to Manual and setup IP Address to make sure with the same subnet as switch

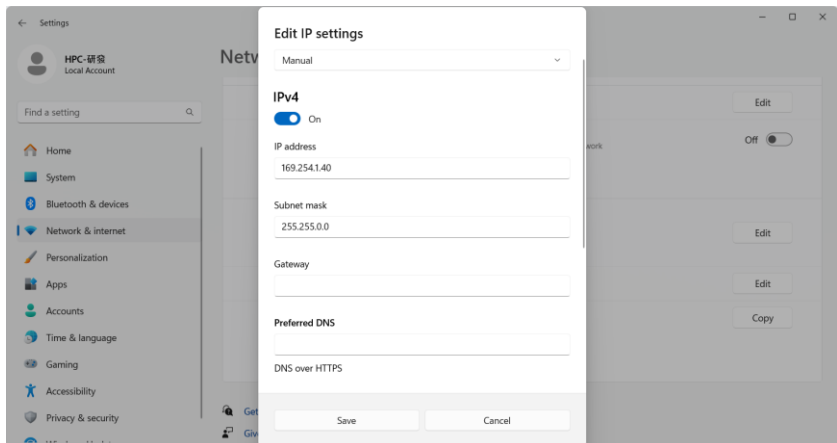


MAC IP Setup

1. Connect the Mac to network switch via Ethernet or Wifi
2. Go to Wifi / Ethernet interface and select detail

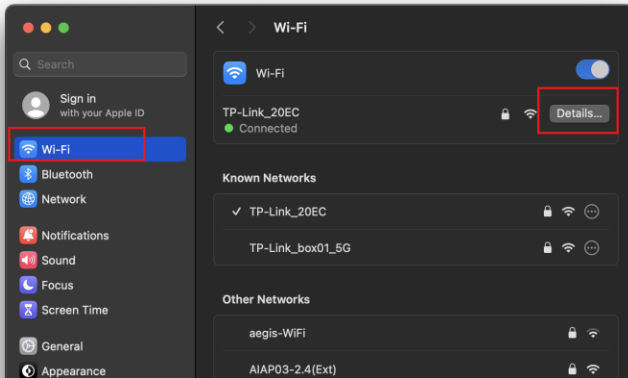

3. Go to TCP/IP and Select Configure IPV4 from DHCP to Manually. Setup IP Address to make sure with the same subnet as switch

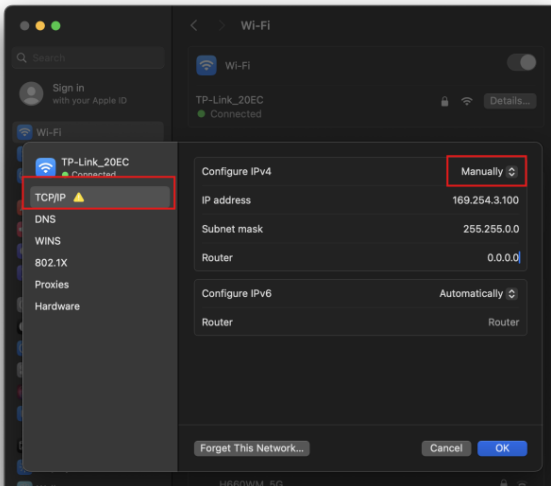

Switch Requirement

The following features need to be enabled on the network switch being used for a Switch

1. Multicast
2. Jumbo Frames / Frame Size / MTU over 9000
3. IGMP Management / Snooping
4. PoE (where being utilised)

Feature explanation

- **Multicast** : (one-to-many or many-to-many distribution) is a group communication where information is addressed to a group of network devices simultaneously
- **Jumbo Frames / Frame Size / MTU** : are Ethernet frames with more than 1,500 bytes of payload. Conventionally, jumbo frames can carry up to 9,216 bytes of payload and must be activated in order to send large packets of data for HDMI distribution
- **IGMP Management / Snooping** : Internet Group Management Protocol (IGMP) snooping is a feature that allows switches to intelligently forward multicast traffic to avoid broadcasting the traffic to all ports to improve network performance.
- **POE** : (Power over Ethernet) devices are all capable of being powered by PoE. Power Supply Units are available for devices, however, the products are not sold with these included. PoE can be disabled on the switch if external PSU' s are being used

Connecting to the switch Web GUI Interface

1. Open your internet browser (Google Chrome, Mozilla, Internet Explorer etc)
2. Type the network switch default IP address into the web browser bar
3. Enter the default user name and password

Default IP address: *192.168.2.1*

User: admin

Password: admin

Configuration Frame Size

To change Frame Size

Under Configuration

Under Ports

Change Maximum Frame Size over 9000

The screenshot shows the 'Port Configuration' table in the switch Web GUI. The table has columns for Port Link, Current, Speed, Auto-Duplex, Auto speed, Flow Control, Maximum Frame Size, Excessive Collisions, and Length Check. The 'Maximum Frame Size' column is highlighted with a red box, showing values of 9000 for ports 1 through 18. The 'Save' and 'Reset' buttons at the bottom left of the table are also highlighted with red boxes.

Port	Link	Current	Speed	Auto-Duplex		Auto speed					Flow Control		Maximum Frame Size	Excessive Collisions	Length Check
				Configured	For.	10M	100M	1G	2.5G	10G	100G	Enable			
1	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
2	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
3	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
4	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
5	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
6	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
7	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
8	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
9	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
10	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
11	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
12	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
13	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
14	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
15	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
16	Down	Auto	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
17	Down	SFP Auto AMS	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓
18	Down	SFP Auto AMS	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	9000	Discard	↓

Configure IGMP Snooping

You can configure the parameters for IGMP snooping, which is used to build forwarding lists for multicast traffic.

Note:

You must log in as the admin user, which has read/write access privileges to change the data on this page.

To Configuration IGMP Snooping


Under Configuration

Under IPMC

Under IGMP Snooping

Under Basic Configuration

Enable below feature and save

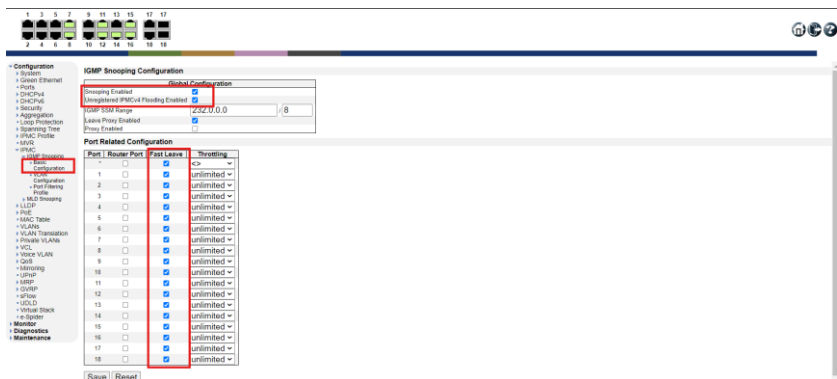

The screenshot shows the configuration page for IGMP Snooping. On the left is a navigation tree with 'IGMP Snooping' selected. The main area is divided into two sections:

- IGMP Snooping Configuration:**
 - Snooping Enabled:
 - Comprehensive IPMC and Flooding Enabled:
 - IGMP SSM Range: 222.1.0.0 / 8
 - Learns Policy Enabled:
 - Storm Control:
- Port Related Configuration:**

Port	Router Port	Fast Leave	Threshold
1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
3	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
4	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
5	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
6	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
7	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
8	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
9	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
10	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
11	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
12	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
13	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
14	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
15	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
16	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
17	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited
18	<input type="checkbox"/>	<input checked="" type="checkbox"/>	unlimited

At the bottom, there are 'Save' and 'Reset' buttons.

To Configuration VLAN


Under Configuration and Setup feature as below

Under IPMC

Under IGMP Snooping

Under Vlan Configuration

Enable below feature and save

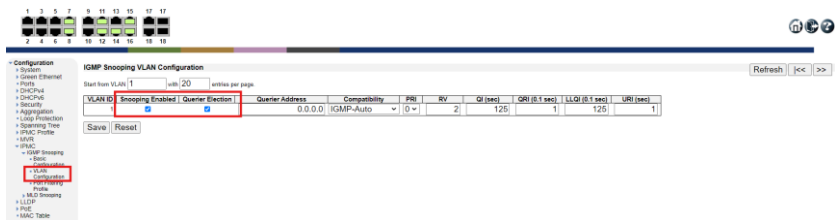


To save Running Configuration

Under Maintenance

Under Configuration

Under Save Start-up config

Press Save Configuration

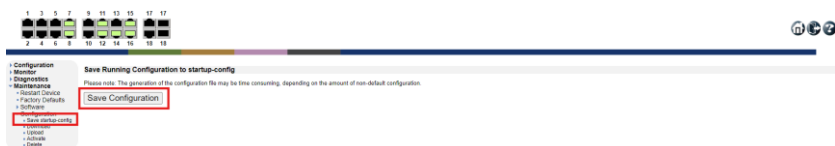

Zyxel

Network Switch

GS1900 Series


Quick Setup Guide

Version: 20240919


Modify computer IP address

Windows IP Setup


1. Connect the PC to network setting (Windows 11)
2. Go to Network & Internet and select Ethernet or Wi-Fi

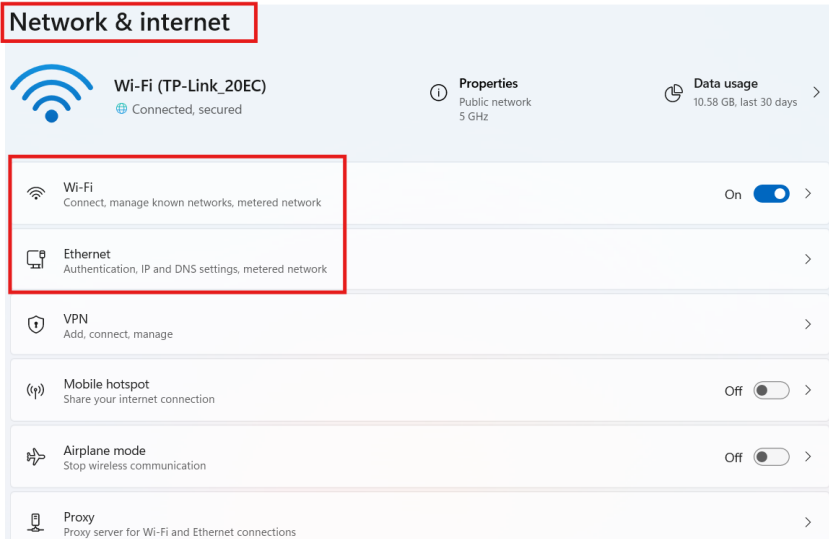

3. Go to Ethernet and Edit

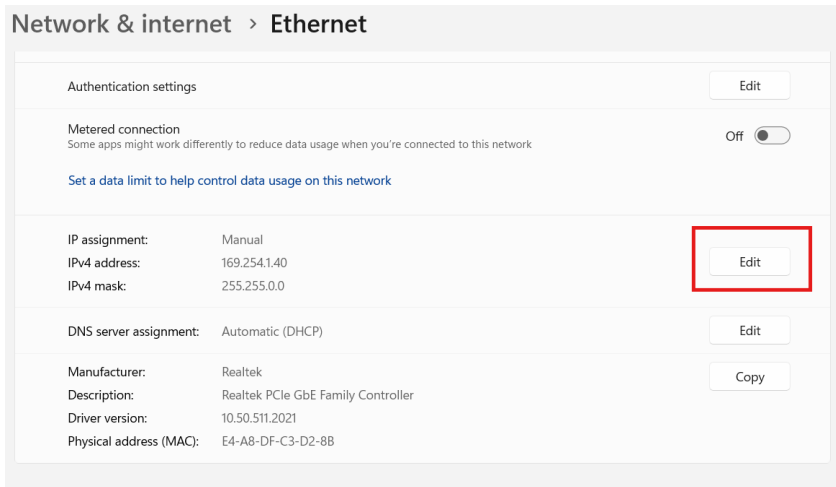


4. Select IP setting From DHCP to Manual and setup IP Address to make sure with the same subnet as switch

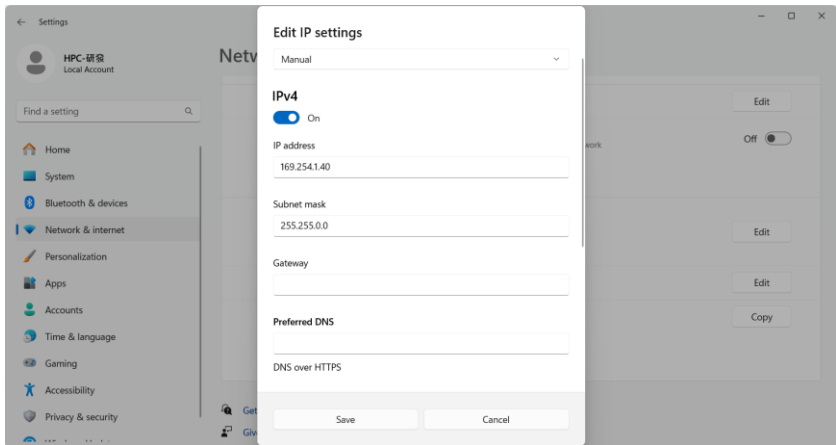


MAC IP Setup

1. Connect the Mac to network switch via Ethernet or Wifi
2. Go to Wifi / Ethernet interface and select detail

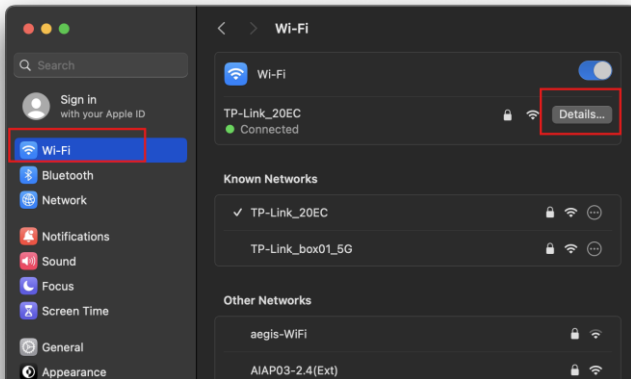

3. Go to TCP/IP and Select Configure IPV4 from DHCP to Manually. Setup IP Address to make sure with the same subnet as switch

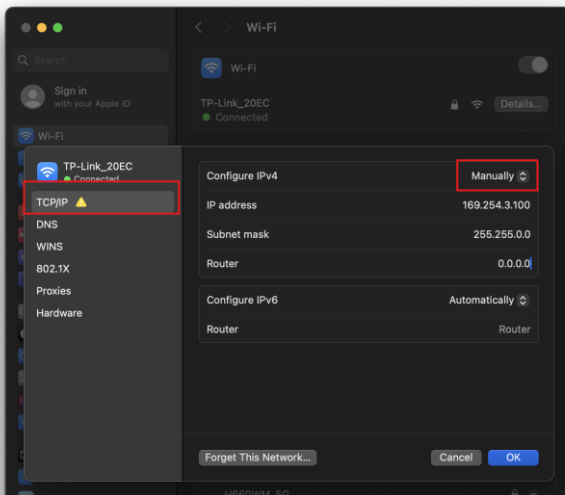

Switch Requirement

The following features need to be enabled on the network switch being used for a Switch

1. Multicast
2. Jumbo Frames / Frame Size / MTU over 9000
3. IGMP Management / Snooping
4. PoE (where being utilised)

Feature explanation

- **Multicast** : (one-to-many or many-to-many distribution) is a group communication where information is addressed to a group of network devices simultaneously
- **Jumbo Frames / Frame Size / MTU** : are Ethernet frames with more than 1,500 bytes of payload. Conventionally, jumbo frames can carry up to 9,216 bytes of payload and must be activated in order to send large packets of data for HDMI distribution
- **IGMP Management / Snooping** : Internet Group Management Protocol (IGMP) snooping is a feature that allows a switch to forward multicast traffic intelligently on the switch. Multicast IP traffic is traffic that is destined to a host group. Host groups are identified by class D IP addresses, which range from 224.0.0.0 to 239.255.255.255. Based on the IGMP query and report messages, the switch forwards traffic only to the ports that request the multicast traffic. This prevents the switch from broadcasting the traffic to all ports and possibly affecting network performance.
- **POE** : (Power over Ethernet) devices are all capable of being powered by PoE. Power Supply Units are available for devices, however, the products are not sold with these included. PoE can be disabled on the switch if external PSU' s are being used

Connecting to the switch Web GUI Interface

1. Open your internet browser (Google Chrome, Mozilla, Internet Explorer etc)
2. Type the network switch default IP address into the web browser bar
3. Enter the default user name and password

Default IP address: *192.168.1.1*

User: admin

Password: 1234

Configure IGMP Snooping

You can configure the parameters for IGMP snooping, which is used to build forwarding lists for multicast traffic.

Note:

You must log in as the admin user, which has read/write access privileges to change the data on this page.

To configuration IGMP Snooping


Under "Advanced Application"

Under "Multicast"

Under "IPv4 Multicast"

Under "IGMP Snooping"

Enable below feature and Apply

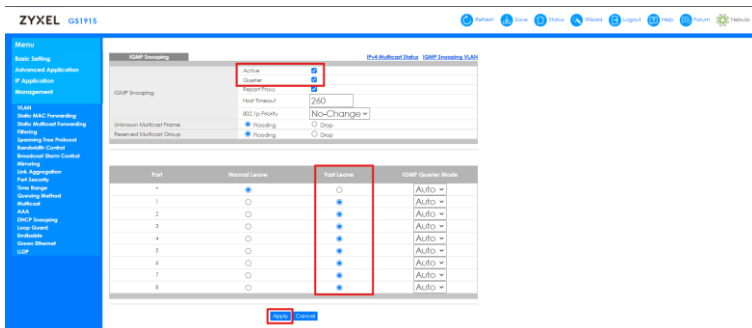

To Click save in the top banner of the web GUI

